


CRTS

ADDENDUM SHEET TO G.C.2 SERVICE MANUAL

KG031

KB KG031

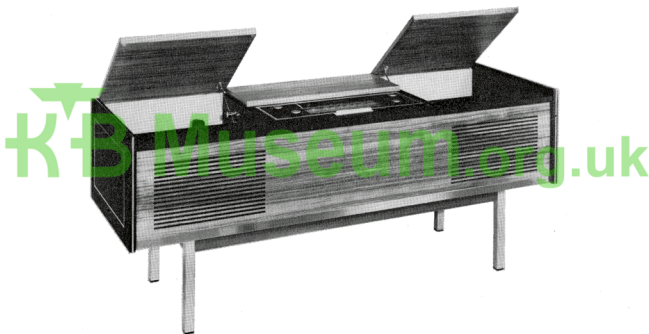

A DIVISION OF **STC**

Issued April 1966

COMBINED RADIO AND TELEVISION SERVICE LTD

REGENT WORKS, SIDCUP, KENT. Tel: FO0tscray 3333

SERVICING ORGANISATION FOR K.B. REGENTONE. R.G.D. ACE. ARGOSY.

ALSO SCOTTISH DEPOT AT
COLLEGE MILTON
EAST KILBRIDE
GLASGOW
EAST KILBRIDE 25101

Dimensions :

Height —	22"
Width —	51¼"
Depth —	17½"
Weight —	77 lbs.

DESCRIPTION	PART/LOCATION No.
Cabinet	1204/220/21974
Cabinet Bottom	34/164/27363
Escutcheon	35/182/A/13855
Piano Hinge	1209/220/75/21963
Lid Stay (Chrome)	1209/220/56/21449
Knobs, 4 off	983/60/01112
Scale	44/56/11379
Scale Backing	8/479/11380
Scale Clamps, 6 off	33/27/4/20628
Pointer	13/284/11289
Speakers, 2 off (10" x 6", Impedance 3 ohms)	11/179/03155
Record Changer BSR UA15	37/35/1/19601
Cartridge, BSR C1	C1/19709
Stylus, Turnover type	ST3/19710
Plug, 3 pin (Gram Input)	13/253/25193
Plug, 3 pin, (Gram Mains)	13/273/25285
Plug, 2 pin, brown (Speaker)	13/201/1/25268
Socket, Tape 5 pin	13/288/SKT/25325
Plug, 5 pin	13/319/25265
Plug, 2 pin, red (Speaker)	13/201/2/25269
Plug, 2 pin black (FM Aerial)	13/201/25275
Rear Panel	13/288/1/15338

Chassis Removal Instructions :

Pull off the knobs. Remove the cabinet bottom. Remove the motor mains feed plug, FM aerial plug, external aerial and earth plugs, tape input plug, cartridge input plug and speaker plugs from their respective sockets on the chassis. Unclear the mains cable. Remove the two chassis retaining screws and the two 4BA nuts, then lower the chassis out of cabinet.

Record Changer Unit Removal :

Remove the L.H. speaker compartment cover. Undo the four chrome headed motor board securing screws and lift the motor board and record changer unit clear of the cabinet.