

CRTS

ADDENDUM SHEET TO P.C.4
SERVICE MANUAL
K.B.
RECORD PLAYER MODEL KP032



K.B. Museum.org.uk

A DIVISION OF **STC**

Issued MAY 1965

COMBINED RADIO AND TELEVISION SERVICE LTD

REGENT WORKS, SIDCUP, KENT. Tel: FOOtscray 3333

SERVICE ORGANISATION FOR K.B. · REGENTONE · R.G.D. · ACE · ARGOSY

ALSO PROVINCIAL DEPOT AT

COLLEGE MILTON

EAST KILBRIDE

GLASGOW

EAST KILBRIDE 25101

Dimensions :

Height —	8"
Width —	15¼"
Depth —	17½"
Weight —	18½ lbs.

DESCRIPTION	PART/LOCATION No.
Cabinet Assembly	998/4/21662
Handle Assy. (Black)	28/114/14187
Chassis Cover Assembly	998/156/20008
Moulded Foot (8 off)	28/121/21647
Catch (2 off)	28/108/1/14192
Strut Hinge (Nickel)	28/127/1/21679
Rear Vent Moulding	28/115/13635
Control Trim	28/126/13671
Fascia Panel (Knobs)	35/298/13447
Fascia Panel (Lid)	28/130/13697
Speaker Grille	28/112/13753
Hinge, Platform (4 off)	35/315/14218
Neon Indicator Lamp (Red)	13/369/12247
Name Plate Escutcheon	35/308/13637
K.B. Badge	21/136/1/13599
Record Changer Unit (Garrard AT5)	37/34/19750
Record Changer Motor	37/34/M/19662
P.U. Cartridge (Garrard GC8M)	GC8M/19642
Stylus 78	GC8M/78/19665
Stylus L.P.	GC8M/LP/19664
Knob Volume	998/63/01117
Knob ON/OFF	998/62/1/01239
Volume Control with ON/OFF switch	
5 Meg. Log	9/263/02191
Treble Control (Rim Edge) 500K Lin.	9/261/02229
Bass Control (Rim Edge) 5 Meg. Log.	9/262/02190
Speaker (7" x 3½" Impedance 25 ohms)	11/159/03114

Chassis Removal Instructions

Remove chassis cover (2 screws). Remove motor board screws (4 off). Lift motor board clear complete with changer unit to give access to chassis. Pull off knobs. Remove the chassis by removing the two 4 BA nuts holding it to baffle. The printed circuit may then be detached from the metalwork by removing the fixing screws (2 off) and the two screws securing the heat sinks.

N.B. Do not operate amplifier without heat sinks secured to the aluminium plate.