

# **CRTS**

## ADDENDUM SHEET TO P.C.7 SERVICE MANUAL

### **KB**

## **Stereophonic Record Player KP033**



A DIVISION OF **STC**

Issued February, 1966

COMBINED RADIO AND TELEVISION SERVICE LTD

REGENT WORKS, SIDCUP, KENT. Tel: F00tscray 3333

SERVICING ORGANISATION FOR K.B. REGENTONE. R.G.D. ACE. ARGOSY.

ALSO SCOTTISH DEPOT AT

COLLEGE MILTON

EAST KILBRIDE

GLASGOW

EAST KILBRIDE 25101

**Dimensions :**

Height —	8 $\frac{5}{8}$ "
Width —	24 $\frac{3}{4}$ "
Depth —	14 $\frac{3}{4}$ "
Weight —	29 lbs.

**PARTS LIST KPO33**

DESCRIPTION	PART/LOC. No.
Cabinet	1147/220/211013
Motor Board	1147/220/51/19713
Control Panel	21/161/211020
Grille Pad	8/454/211019
Baffle Grille	28/171/13857
Strut Hinge, 2 off	28/155/13858
Case Lock	28/156/211030
Handle Assembly	28/153/14239
Polythene foot, 8 off	28/8/1/211016
Signal Lens (Red)	35/68/13861
Nameplate "Stereophonic"	21/141/1/13862
Nameplate "K.B. Westmoreland" (Cabinet Lid)	21/168/13863
BSR UA15 Super Slim Record Changer	37/35/1/19708
P.U. Cartridge, BSR type C1	C1/19709
Stylus (Turnover type). Type ST3	ST3/19710
Speaker (7" X 3 $\frac{1}{2}$ ". Impedance 15 ohms)	11/175/03156
Knob Assembly, 1 off	35/412/01010
Knobs Assembly, 3 off	765/62/5/01771
Phono socket Panel	13/399/15411
Leg Set	LK38
<b>EXTENSION SPEAKER</b>	
Extension Speaker Cabinet	1147/220/118/21037
Grille Pad	8/455/211022
Name Trim	21/160/13860
Baffle Grille	28/172/13859
Handle Assembly	28/169/14240
Speaker (7" X 3 $\frac{1}{2}$ ". Impedance 15 ohms)	11/175/03156
Rear Cover	34/145/27364

**Access to the Amplifier :**

First, lift up the motor board, which is secured with four screws, and unplug the mains cable. Now remove the screw securing the terminal block to the cabinet, and feed the slack in the wires into the amplifier compartment. Remove the two screws securing the amplifier compartment, and lift the rear edge clear of the groove in the cabinet. The amplifier can then be drawn back along the cabinet.

**STYLUS REMOVAL AND FITTING INSTRUCTIONS  
FOR THE BSR CERAMIC CARTRIDGE TYPE C1**
**Removal**

Rotate the stylus assembly midway between the stereo and 78 position. Tilt the stylus assembly slowly towards the spring retaining clip at the rear of cartridge by means of the flag, and it can then be ejected easily by pressure at the base of the flag towards the front of the cartridge.

**Fitting**

Grasp the turn over flag and locate the stylus assembly under the retaining clip, holding the stylus assembly in the 78 position. Rotate the assembly midway between the stereo and 78 positions ensuring that the plastic tip of the assembly does not slip out of the clip. Then applying pressure at the base of the flag the stylus will clip into position.