

CRTS


ADDENDUM SHEET TO G.C.2

TG431

SERVICE MANUAL

Regentone

TG431

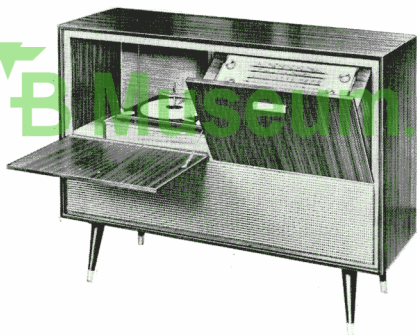

A DIVISION OF **STC**

Issued February, 1966

COMBINED RADIO AND TELEVISION SERVICE LTD

REGENT WORKS, SIDCUP, KENT. Tel: FO0tscray 3333

SERVICING ORGANISATION FOR K.B. REGENTONE. R.G.D. ACE. ARGOSY.

ALSO SCOTTISH DEPOT AT

COLLEGE MILTON

EAST KILBRIDE

GLASGOW

EAST KILBRIDE 25101

Dimensions :

Height —	33 $\frac{11}{16}$ "
Width —	44"
Depth —	15"
Weight —	86 lb.

PARTS LIST FOR TG431

DESCRIPTION	PART/LOCATION No.
Cabinet	1113/220/21784
Cabinet Back	1113/222/27018
Escutcheon	35/182/13611
Nameplate Escutcheon	35/27/1/13607
Nameplate (Regentone)	21/85/13063
Handles, 2 off	28/167/14227
Lid Stay (Catch)	28/165/21886
Knobs, 4 off	762/62/2/01551
Calibrated Scale	44/51/11250
Scale Clamp, 6 off	33/27/4/20772
Pointer	13/284/11289
Scale Lamp	13/143/1/12340
Lampholder	13/348/23356
Speakers, 2 off (8" x 5". Impedance 3 ohms)	11/150/03116
Record Changer, BSR UA15	37/24/19308
Cartridge, Stereo type GP81/1	GP81/1/19644
Styli, 78	GP81/1/78/19281
Styli, L.P.	GP81/1/33/19287

Chassis Removal Instructions

Pull off the knobs. Remove chassis compartment back by means of three sheet metal screws. Remove F.M. aerial, loudspeaker connections, pickup input and motor feed plugs from their respective sockets on the chassis. Remove mains feed and pilot lamp feed from the terminal block and tag panel respectively. Undo the two 4BA nuts holding the chassis rear flange to cabinet. Lift the chassis clear of the two mushroom headed locating screws and remove the chassis from the cabinet.

Access to the record changer may be obtained by removing the four chrome headed screws from the motor board and lifting the motor board and record changer clear of the cabinet.