



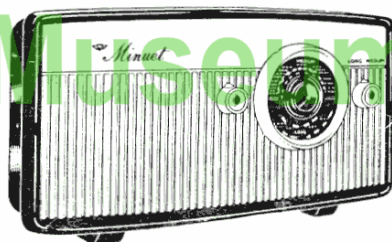

SERVICE DATA

ISSUED OCT., 1957

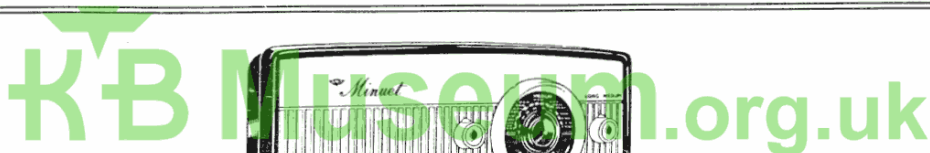

SPECIFICATION

The OB.10 is a five-valve, two-waveband transportable receiver suitable for A.C. mains operation.

VOLTAGE RATING: 200-250 volts A.C. 40-100 c/s.

POWER CONSUMPTION: 36 watts.

WAVERANGES: Long waveband: 160-280 kc/s. (1,875-1,070 metres).
Medium waveband: 500-1,620 kc/s. (600-185 metres).

CONTROLS: Off/on and Volume.
Tuning.
Wavechange.

VALVE COMPLEMENT:	Function.
Brimar 6BE6	Frequency Changer.
Brimar 6BJ6	I.F. Amplifier.
Brimar 6AT6	2nd Detector and 1st Audio Amplifier.
Brimar 6AQ5	Audio Output.
Brimar EZ80	Rectifier.

DIMENSIONS: Width 12.5 inches (31.8 cms.)
Height 6.5 inches (16.5 cms.)
Depth 4.5 inches (11.4 cms.)

WEIGHT: 5 lbs. approximately (2.3 kilos).

GENERAL INFORMATION

This receiver is based on a printed circuit design and all components, other than the loudspeaker and output transformer, are mounted on a single flat plate printed board.

Aerial and earth terminals are not provided, as the design incorporates an 8-inch ferrite aerial unit with high-Q coils for long and medium wavebands.

SETTING-UP PROCEDURE

1. Remove the three fixing screws holding the back moulding to the front panel. One of these is situated at the back in the carrying handle recess and two are underneath the base.
2. Set the mains voltage adjustment pin (situated on a panel attached to the mains transformer) to the correct position.
3. Check that all valves are firmly pressed into their sockets.
4. Replace back of cabinet and screw up.

OB 10

CIRCUIT DESCRIPTION

The aerial circuit consists of an 8-inch ferrite aerial unit with two windings. One is used for M.W. whilst the two in series give the L.W. inductance. C_1 (120 pF) is switched across the total inductance on L.W. to give aerial circuit tracking.

A single tapped oscillator coil circuit with cathode injection is used and on M.W. C_5 (390 pF) acts as padder and D.C. grid blocking condenser.

On L.W. C_6 (320 pF) is switched in parallel with the coil to give the correct coverage; i.e., after presetting the oscillator coil for M.W. no further adjustment is made for L.W.

The I.F. circuit is conventional with the detector circuit using R_6 (0.5 M Ω) as diode load and volume control. This is tapped and components R_5 and C_{10} provide a bass compensation circuit giving bass lift at lower settings of the volume control.

A 6AQ5 is used as audio output with a tapped output transformer giving hum bucking with the use of R_{12} (1.8 k Ω). C_{15} (0.01 μ F) gives fixed tone compensation.

The rectifier (EZ80) is fed from a separate heater winding to reduce heater cathode stress and the A.C. input to anode is via R_{14} (75 Ω). This latter is a small wire wound type which will fuse under certain fault conditions.

C_{17} (0.03 μ F) removes modulation hum in conjunction with R_{14} .


REMOVAL OF PRINTED CIRCUIT ASSEMBLY FROM CABINET

1. Remove cabinet back moulding by means of three screws:
1—in carrying handle recess.
2 and 3—underneath at either end.
2. The front plate, complete with circuit and loudspeaker, may now be withdrawn.
3. Remove knobs: Tuning—pull off.
Volume and Wavechange switch—Grub screws.
4. Unscrew four fixing screws holding printed circuit to front plate:
(Three cheese head 4BA; one drive screw 4BA).
Note that two of these also clamp speaker to front plate.
5. The printed circuit assembly may now be removed from the front plate, leaving the leads to output transformer still connected for servicing.

ALIGNMENT INSTRUCTIONS

The following equipment will be required:


- A. A.M. signal generator covering the range 140–1700 kc/s.
 - B. Power output meter.
1. Set the tuning pointer to datum with the gang condenser at maximum capacity.
 2. Progressively reduce signal input as the sensitivity increases with alignment, maintaining approximately 50 mW output.
 3. All measurements made with R.F. signal modulated 30% at 400 c/s.
 4. The oscillator operates at a higher frequency than the input signal on both bands.
5. I.F. ALIGNMENT
- (a) Set generator to 422 kc/s and connect via 0.1 μ F to the signal grid of V_1 6BE6 (between gang condenser frame and aerial section).
 - (b) Pre-set the I.F. transformer cores as follows:—

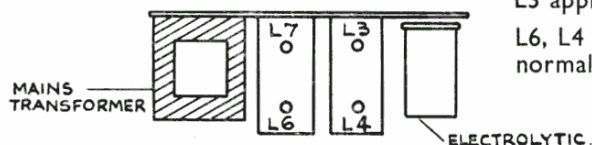

L3 approx normal position.
L6, L4 slightly unscrewed from normal position.

KB Museum.org.uk

PRINTED CIRCUIT

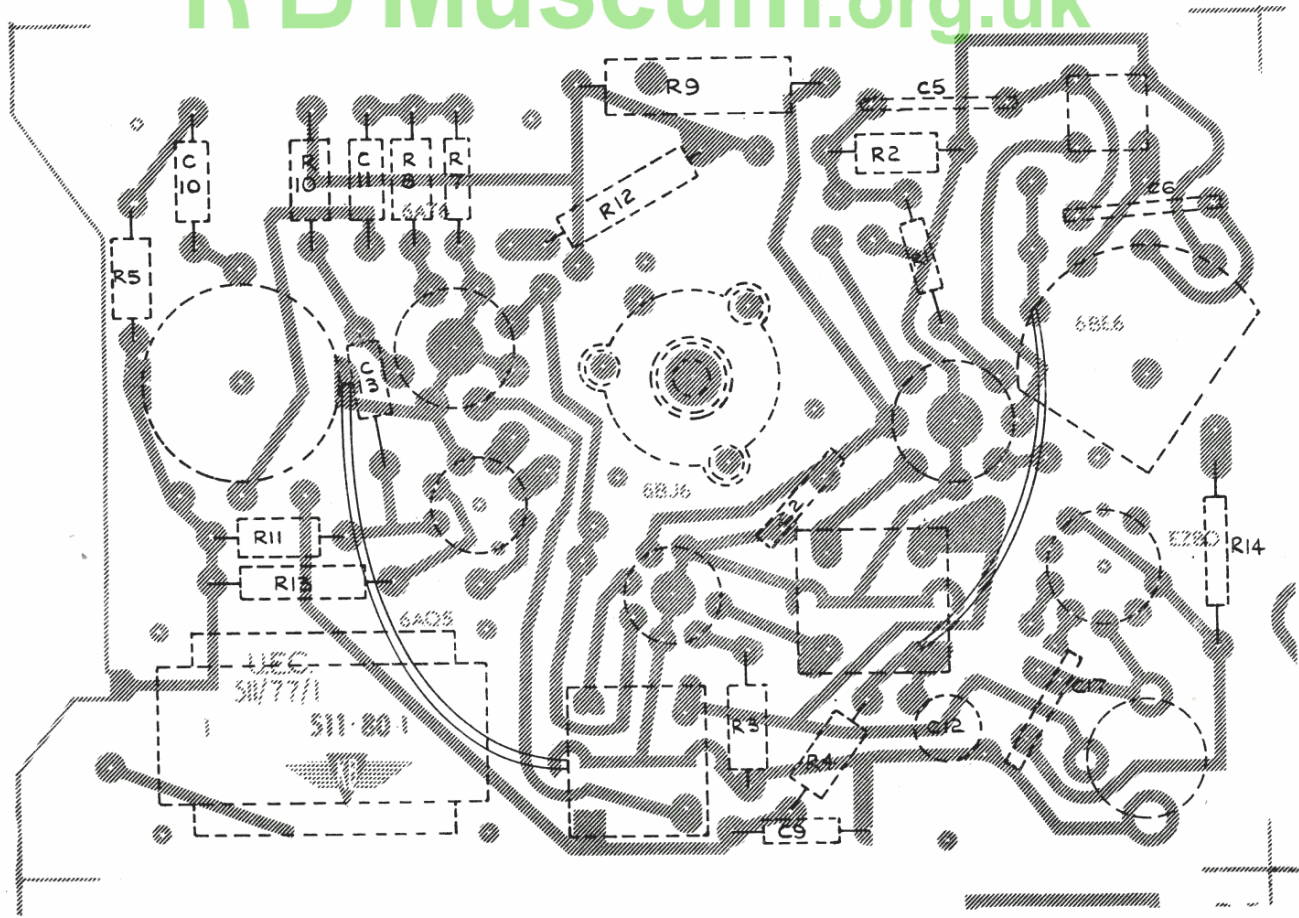

V1 6BE6


V2 6BJ6

V3 6AT6

V4 6AQ5


V5 EZ 80

page FIVE

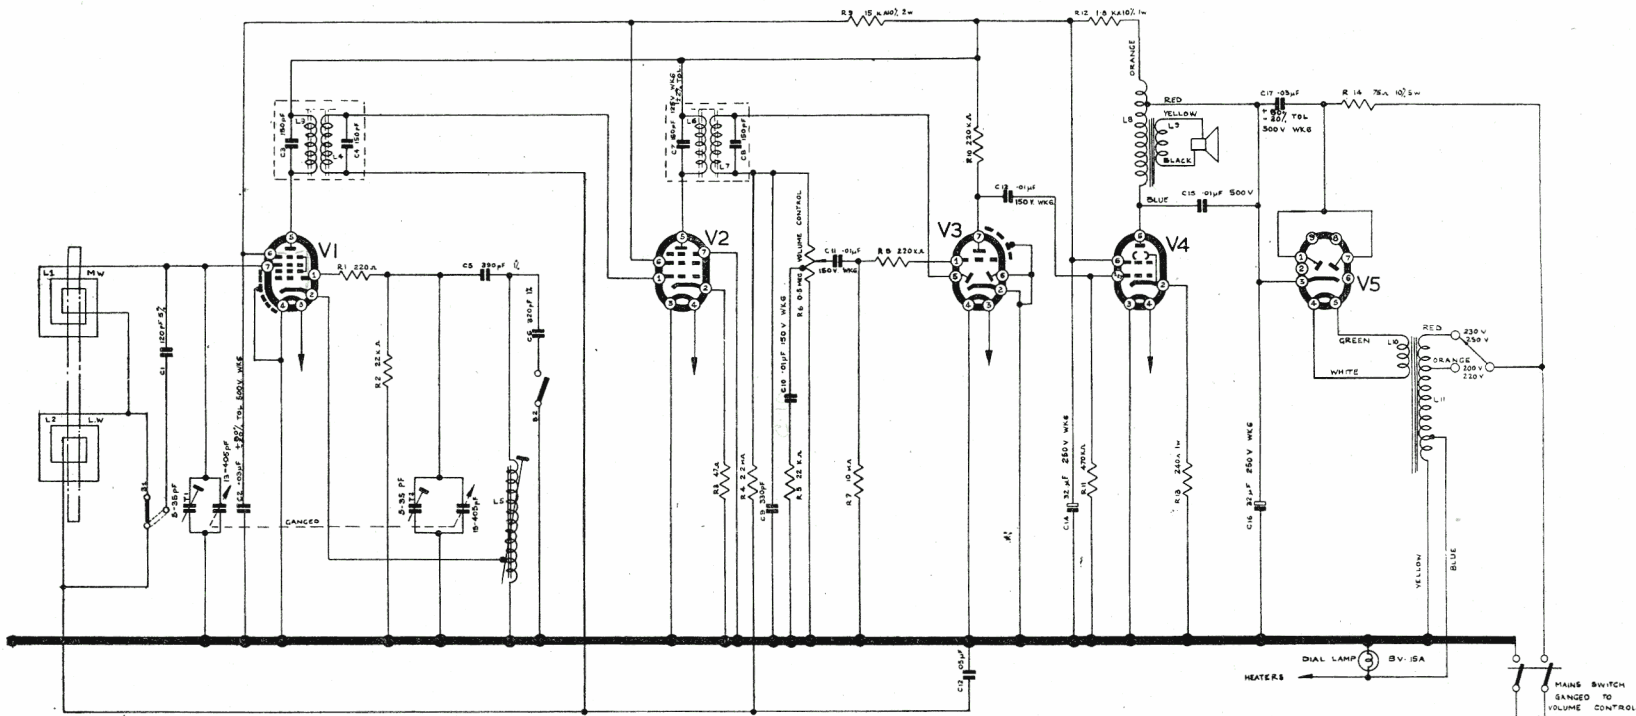

511/c

TOP VIEW OF CHASSIS

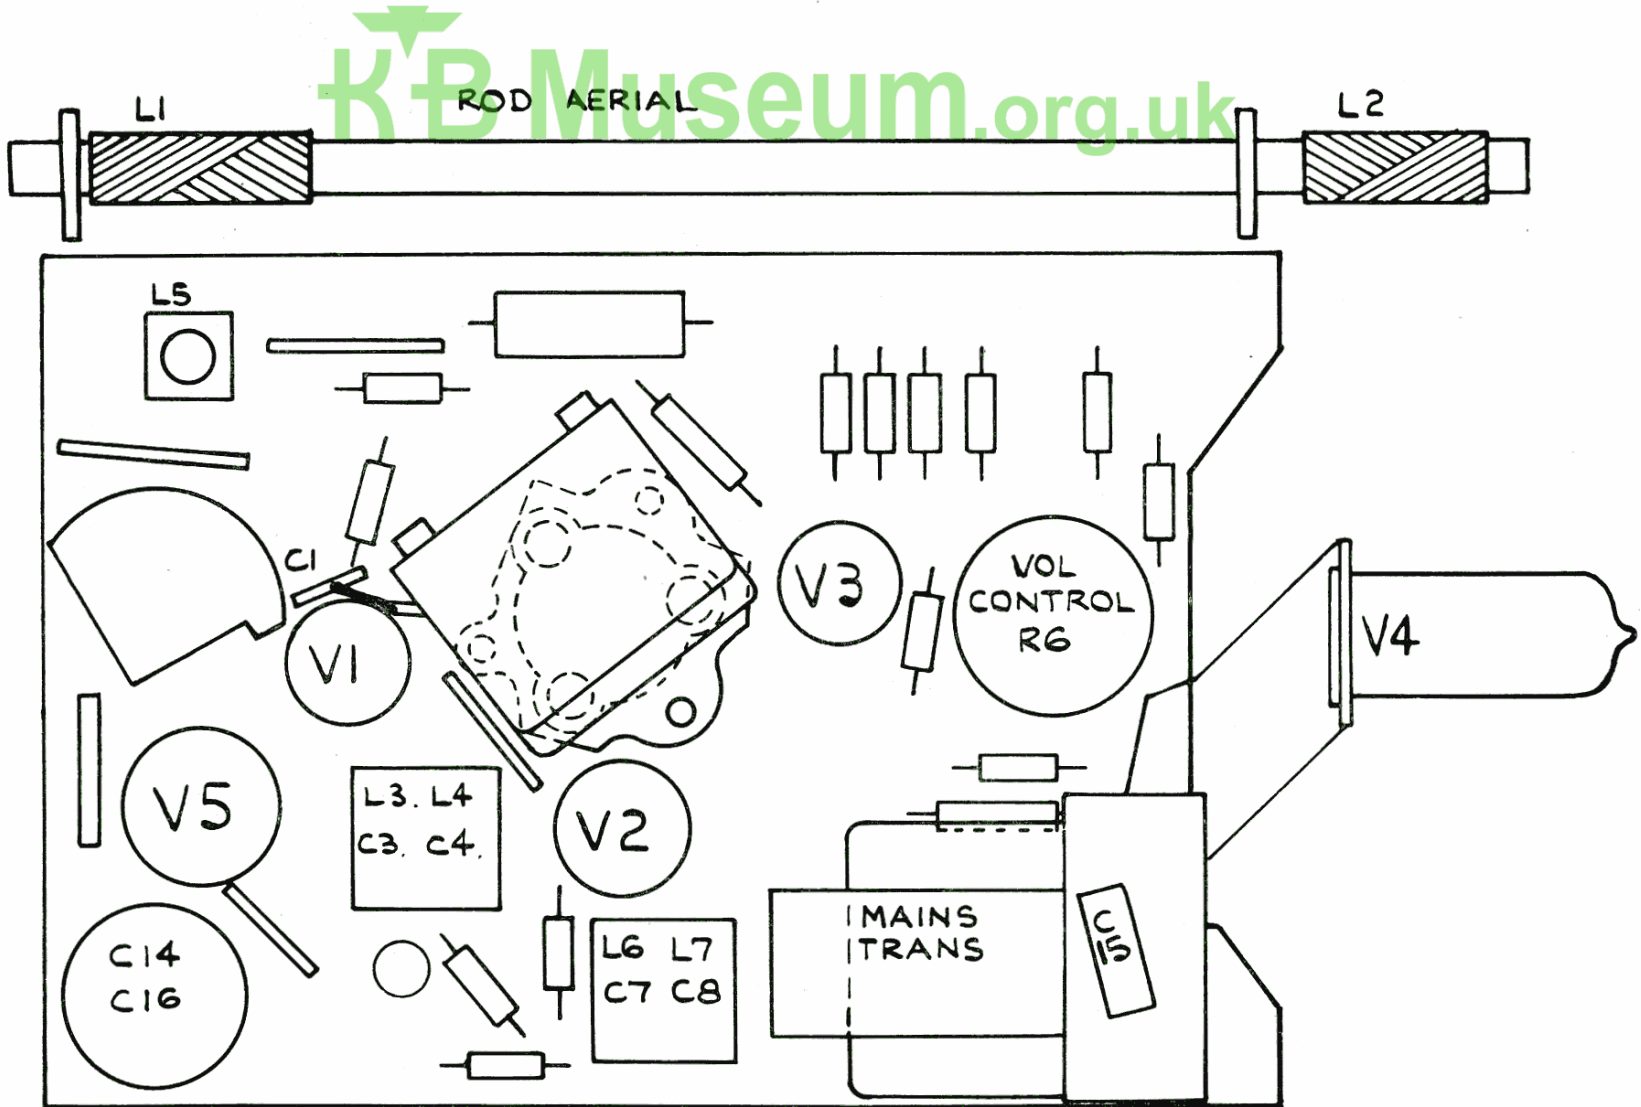

KB Museum.org.uk

Valve Pin Voltages measured with a Voltmeter having 1,000 Ohms/Volt Impedance

VALVE	CIRCUIT REFERENCE	1	2	3	4	5	6	7	8	9
6BE6	Frequency Changer	SN	0	6.3 A.C.	0	224	82	SN	—	—
6BJ6	I.F. Amplifier ...	SN	0.5	0	6.3 A.C.	224	82	0	—	—
6AT6	Detector and Audio Amp.	SN	0	6.3 A.C.	0	SN	0	65	—	—
6AQ5	Output	0	10	0	6.3 A.C.	248	224	0	—	—
EZ80	Rectifier	228 A.C.	—	263	*	*	—	228 A.C.	—	—

E—Denotes Chassis connection.

SN—Denotes Slightly Negative.

All measurements taken with controls set for minimum gain and no applied signal.

Power Input 240V. into 230/250 tap.

Pointer at datum on M.W.

Smoothing Electrolytics ... C 16, 32 mF. C 14, 32 mF.

D.C. Voltage 263 224

Hum Voltage 9.5 0.5

Smoothing Resistors R. 12, 1.8 K. R. 9, 15 K.

Voltage Drop 37 134

N.B.—Printed Circuit Receiver and hence all measurements between H.T.—ve and relevant Valve Pins.

Mains Input Current 150 mA.

Total H.T. Current 60 mA.

Filament Current —

Power Output 2 Watts for 10% Distortion.

Power Supply Range 200-250V. 40-100 c/s.

Power Consumption 36 Watts.

* 6.3 Volts A.C. between Pins 4 and 5.

IMPORTANT

This Receiver uses BRIMAR Valves and was specifically designed around them.

Its performance may be impaired unless BRIMAR Valves of the correct types are used when replacements are needed.

